

# Honda VFR800X Crossrunner

2011-



## SUPPLEMENTARY MANUAL


for iQSE-1 + QSH-F4B

REMOVE THE SEAT.

REMOVE THE FUEL TANK.




REMOVE THE AIRBOX.

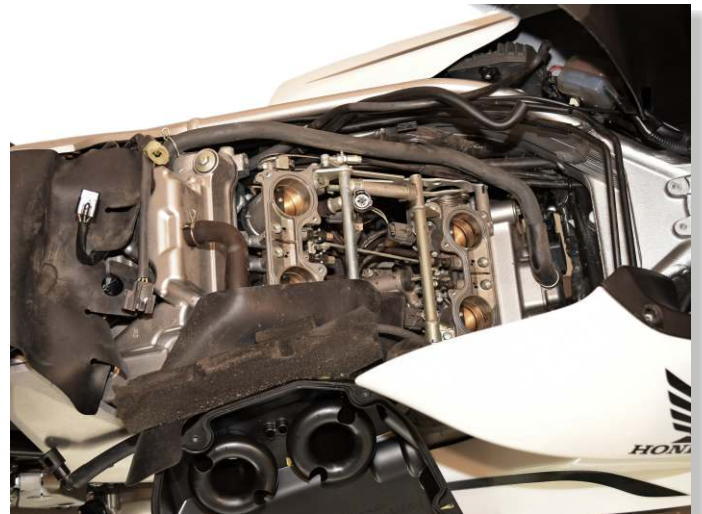

PLUG QSH CONNECTORS IN-LINE  
WITH THE FUEL INJECTOR  
CONNECTORS.

(GREY, 2-POLE CONNECTORS BELLOW AIRBOX)

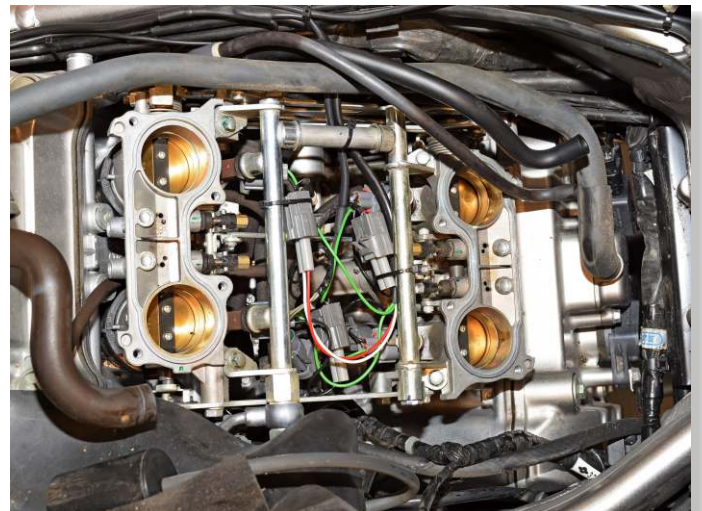

# Honda VFR800X Crossrunner

2011-



**CONNECT QSH BLACK WIRE  
TERMINAL TO CHASSIS GROUND.**



**MOUNT THE QSE SENSOR.**  
(REPLACE THE BOLT WITH THE ONE SUPPLIED.  
TIGHTEN THE BOLT IN THIS POSITION BY  
ABOUT 5-6 NM.  
IF YOU DO NOT HAVE A TORQUE WRENCH,  
TIGHTEN THE BOLT UNTIL THE  
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.

(FOR DIFFERENT MOUNTING OPTIONS,  
REFER TO THE SENSOR INSTALL GUIDE.)



**TYPICAL POSITION FOR THE  
QUICKSHIFTER EASY.**

