

# Kawasaki Vulcan 900 Custom

2007-



## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P2T

REMOVE THE SEAT.  
REMOVE THE LEFT FRAME COVER  
BELOW THE MAIN SEAT.



REMOVE THE IGNITION COVER.



REMOVE THE ENGINE LEFT SIDE  
COVER.



# Kawasaki Vulcan 900 Custom

2007-




**REMOVE THE DRIVE BELT COVER.**



**TAKE OFF THE RED TERMINAL FROM  
ONE COIL.  
CONNECT THE QSH GREEN  
TERMINAL TO THIS COIL TERMINAL.**

**CONNECT THE RED TERMINAL TO THE  
QSH RED WIRE TERMINAL AND  
SECURE WITH TAPE.**


**SPLICE THE QSH WHITE WIRE TO  
THE BLACK/GREEN WIRE OF THE COIL  
BY USING THE SUPPLIED RED WIRE  
TAP CONNECTOR.  
(REFER TO THE QSH-P2T INSTRUCTIONS)**

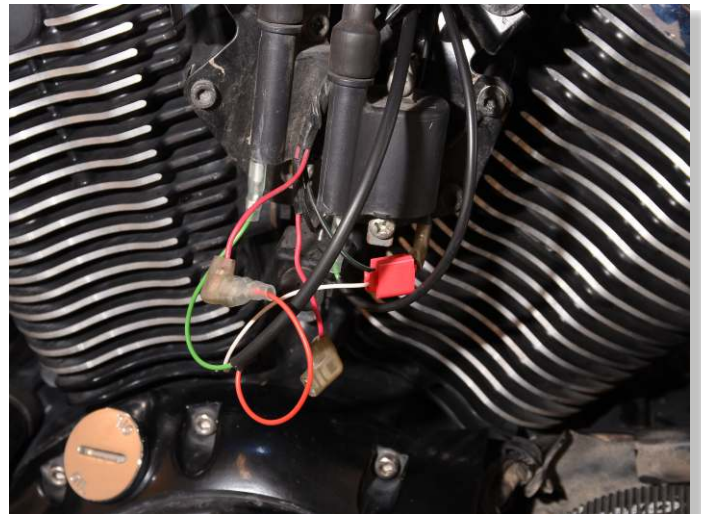

**TAKE OFF THE RED TERMINAL FROM  
THE 2ND COIL.**

**CONNECT THE QSH GREEN  
TERMINAL TO THIS COIL TERMINAL.**

**ISOLATE THE UNUSED RED TERMINAL  
WITH TAPE.**

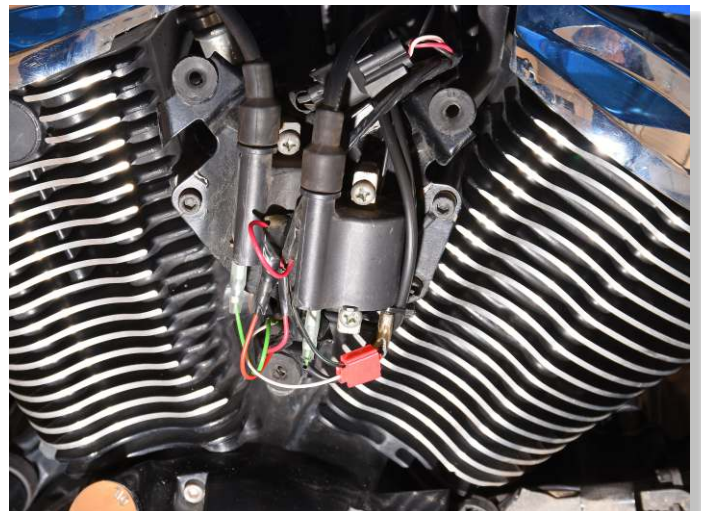

# Kawasaki Vulcan 900 Custom

2007-



**CONNECT QSH BLACK WIRE  
TERMINAL TO CHASSIS GROUND.**



**MOUNT THE QSE SENSOR.**  
(PLACE THE SENSOR IN THE ROD AS SHOWN.  
TIGHTEN THE NUT BY HAND FULLY  
AND THEN BY A 1/4 TURN USING A WRENCH.)

FOR DIFFERENT MOUNTING OPTIONS,  
REFER TO THE SENSOR INSTALL GUIDE.)



**TYPICAL POSITION FOR THE  
QUICKSHIFTER EASY.**

