

Suzuki DL1000 V-Strom 2014-



SUPPLEMENTARY MANUAL

for iQSE-1 + QSX-F2A

REMOVE THE SEAT.

REMOVE THE FUEL TANK FAIRINGS.



REMOVE THE FUEL TANK.

REMOVE THE AIRBOX.



PLUG QSX CONNECTORS IN-LINE
WITH THE FUEL INJECTOR
CONNECTORS.

(BROWN AND GREY, 2-POLE CONNECTORS BELLOW
AIRBOX)



Suzuki DL1000 V-Strom 2014-




**CONNECT Q SX BLACK WIRE
TERMINAL TO CHASSIS GROUND.**



MOUNT THE Q SE SENSOR.
(REPLACE THE BOLT WITH THE ONE SUPPLIED.
TIGHTEN THE BOLT IN THIS POSITION BY
ABOUT 5-6 NM.
IF YOU DO NOT HAVE A TORQUE WRENCH,
TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.

(FOR DIFFERENT MOUNTING OPTIONS,
REFER TO THE SENSOR INSTALL GUIDE.)

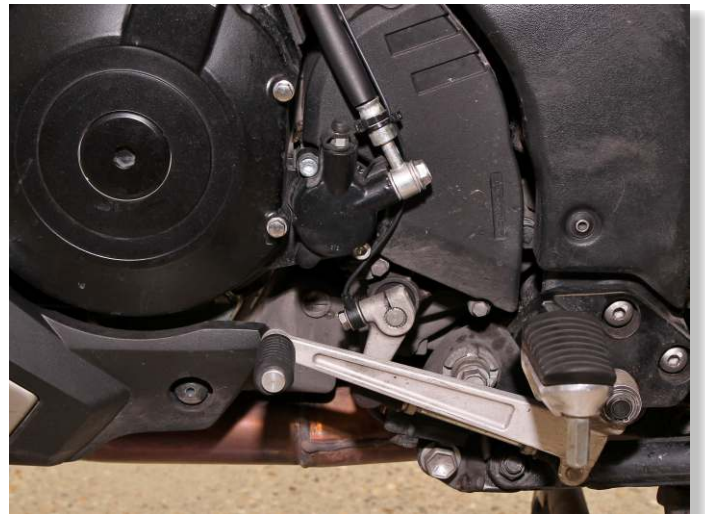

**TYPICAL POSITION FOR THE
QUICKSHIFTER EASY.**

