

Suzuki GSF1250 Bandit


2007-2016



SUPPLEMENTARY MANUAL

for QSE-1 + QSX-P4B

REMOVE THE SEAT.
REMOVE THE FUEL TANK.

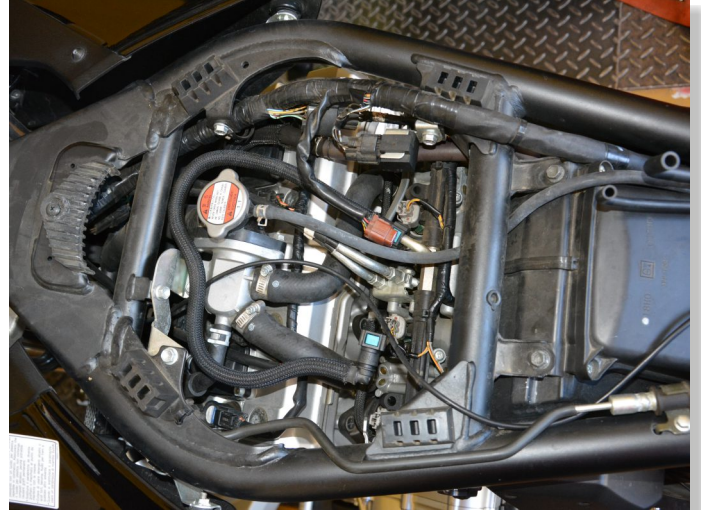

PLUG QSX CONNECTORS IN-LINE
WITH THE IGNITION COIL
CONNECTORS.
(BLACK, 2-POLE CONNECTORS BELOW FUEL TANK)



CONNECT QSX BLACK WIRE
TERMINAL TO NEGATIVE SIDE
OF BATTERY.



Suzuki GSF1250 Bandit

2007-2016



MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
PLACE THE CONICAL WASHERS AT THE TWO SIDES OF
THE SENSOR LIKE THIS: (O). TIGHTEN THE BOLT IN
THIS POSITION BY ABOUT 5 NM. IF YOU DO NOT HAVE
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.
FOR DIFFERENT MOUNTING OPTIONS,
REFER TO THE SENSOR INSTALL GUIDE.)



TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

